


ASSEMBLY INSTRUCTIONS

THE TEXAS BED

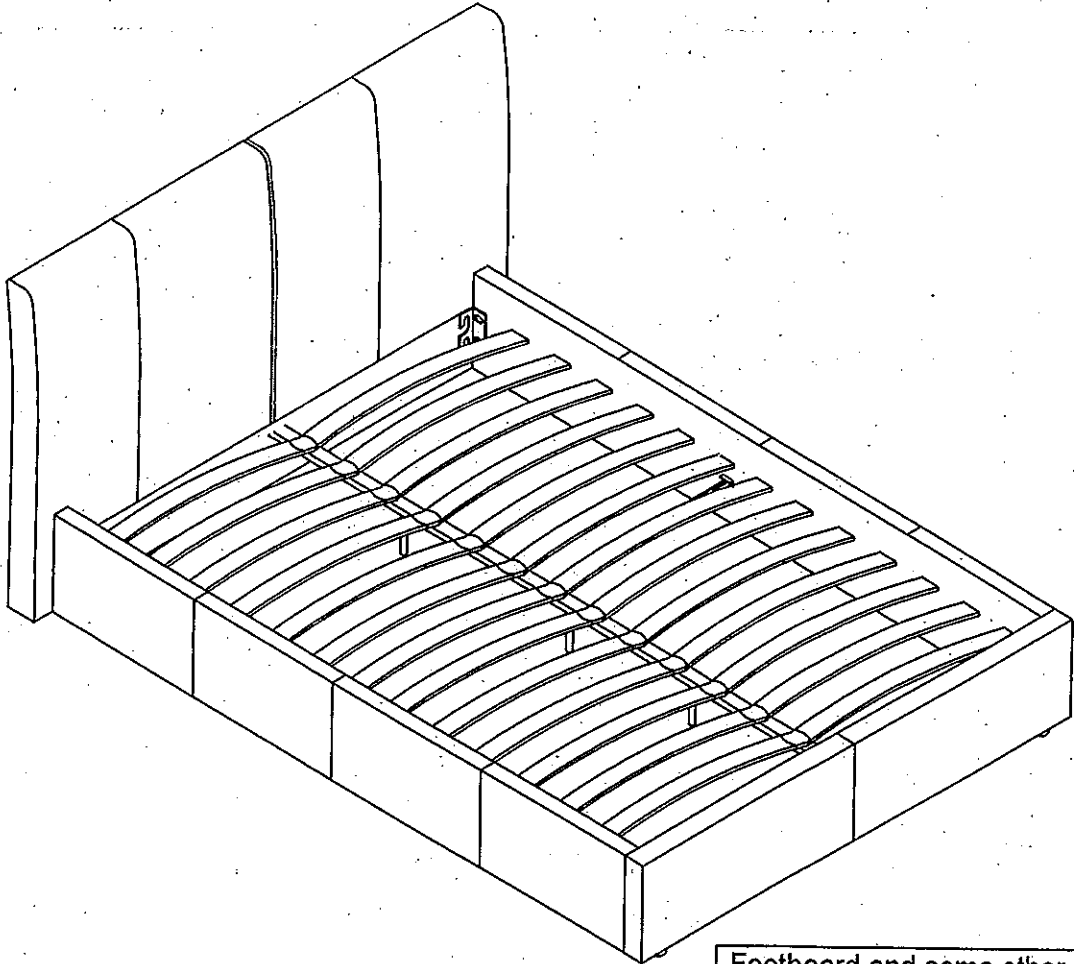









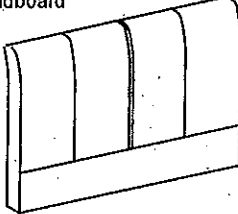
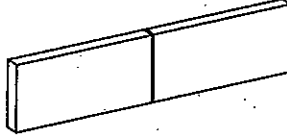
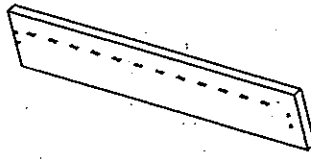


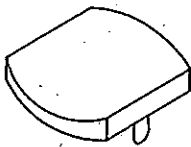

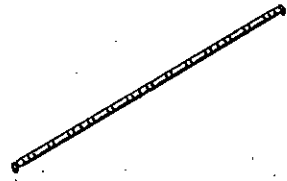
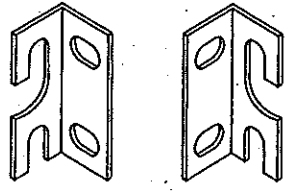

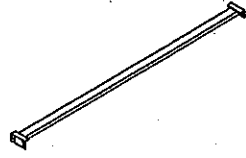
Footboard and some other parts are in the rear headboard.

HELPFUL ADVICE PRIOR TO ASSEMBLING THE BED

- 1) Owing to the size and weight of the bed, we recommend that it is assembled by two adults, on a flat surface, in the room that it is intended for.
- 2) Please do not use any tools other than those provided or recommended in these instructions.
- 3) Please do not discard any packaging until you have checked that you have all the parts and fittings. Keep all fittings out of reach of children.
- 4) Assemble all parts loosely until advised to tighten. Depending on use, it may be necessary to tighten the fittings from time to time, so please save your allen key and spanner that has been provided.

Do not throw away any of the packing or the instruction book until you have checked all the components and fittings and the furniture is fully assembled.

BILL OF MATERIAL

<p>Ⓐ 16PCS-BOLT M8*20mm</p> 	<p>Ⓑ 2PCS-BOLT M6*25mm</p> 	<p>Ⓒ 4PCS-BOLT M6*15mm</p> 
<p>Ⓓ 16PCS-FLAT WASHER</p> 	<p>Ⓔ 16PCS-SPRING WASHER</p> 	<p>Ⓕ 3PCS-BOLT M6*30mm</p> 
<p>Ⓖ 1PCS-ALLEN KEY 5MM</p> 	<p>Ⓗ 1PCS-ALLEN KEY 4MM</p> 	
<p>Hazard Warning!</p> <p>Keep small components out of the reach of children</p>		
<p>① 1PCS-Headboard</p> 	<p>② 1PCS-Footboard</p> 	<p>③ 2PCS-Side Rail</p> 
<p>④ 3PCS-centre support leg</p> 	<p>⑤ 4PCS-Leg</p> 	<p>⑥ 13/15PCS-Plastic slat cap</p> 
<p>⑦ 26/30PCS-Bent Slat</p> 	<p>⑧ 1PCS-Centre support rail</p> 	<p>⑨ 4PCS- Hook Bracket</p> 
<p>⑩ 26/30PCS- and plastic cap</p> 	<p>⑪ Horizontal support rail x 1</p> 	

Step:

- 1) Assemble the hook bracket (9) to side rail (3) using bolts (A), Spring washer (E) and flat washer (D) as shown. Tighten the bolts using allen key (G).
- 2) Attach the legs (5) to headboard (1) and footboard (2).
- 3) Fix the side rails (3) to headboard (1) and footboard (2) using bolts (A), spring washer (E) and flat washer (D) as shown. Tighten the bolts using allen key (G).
- 4) Attach centre support legs (4) to centre support rail (8) using bolts (F) as shown. Tighten the bolts using allen key (H).
- 5) Slot in centre support rails (8) to headboard (1) and footboard (2) using bolts (B) as shown. Tighten the bolts using allen key (H).
- 6) Attach horizontal support rail (11) to side rails (3) using bolts (C) as shown. Tighten the bolts using allen key (H).
- 7) First the and plastic cap (10) set to eds (7) and then insert two, slot in the bent slats (7) to side rails (3) pre-holes and then attach bent slats (7) with plastic slat cap (6) to centre support rails (8) as shown.

